



www.fibatape.com to view our easy-to-follow “How-To” Videos!

Repairing Larger Cracks

CRACKSTOP™ REPAIR FABRICS



Self-Adhesive Crackstop™ Repair Fabric is ideal for repairing large stress cracks.

INSTALLATION TIPS:

- With a utility knife widen the crack so that it can be filled with compound.
- Apply self-adhesive Crackstop, pressing firmly.
- Apply compound. Make sure the compound is spread through the mesh and into the crack.
- When first coat is dry, sand smooth then apply a wider finishing coat.
- Sand to a smooth finish.

Available in 2 Sizes: 6” x 20’ and 6” x 75’

Wall Repair or Rehabilitation

Use Super Crackstop™ Repair fabric for spiderweb cracking and damaged walls.

INSTALLATION TIPS:

- Remove loose debris and apply self-adhesive Super Crackstop over entire surface.
- Finish by applying a thin skim coat of compound and sand where needed.
- Fiberglass mesh provides strong reinforcement.
- Eliminates removing old plaster and inserting new extension jambs on doors and windows.

Available in 2 Sizes:

36” x 75’ - covers 225 square feet

36” x 150’ - covers 451 square feet

SUPER CRACKSTOP™ REPAIR FABRICS



Repairing Small Holes & Cracks


For small damaged areas, use FibaTape® Wall Repair Tape.

INSTALLATION TIPS:

- For **cracks**, cut FibaTape® repair tape in appropriate lengths and follow the length of the crack.
- For **holes** up to 2" in diameter simply apply the tape in a cross hatch manner over the hole.
- Apply first coat of compound. When dry, sand lightly.
- Apply finishing coat of compound, spreading it beyond the edge of the first coat. Sand to smooth finish when dry. If necessary, apply additional coats.



FIBERGLASS MESH REPAIR PATCH

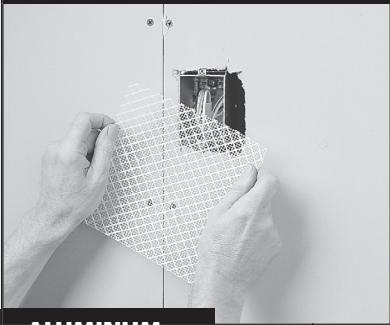

Ideal for repairing electrical outlet holes.

INSTALLATION TIPS:

CAUTION: Turn off power.

- Remove loose debris. Apply FibaTape® fiberglass electrical patch over outlet and entire area.
- Run utility knife around inside edge of outlet box to remove excess material.
- Apply first coat of compound. Sand when dry. Apply finishing coats.
- Can also be used on walls for damaged areas in drywall or plaster.

ALUMINUM REPAIR PATCH



Ideal for repairing large holes, particularly in ceilings.

INSTALLATION TIPS:

- Remove loose debris and apply FibaTape® self-adhesive aluminum patch.
- Apply compound wider than patch. Sand when dry and apply wider finishing coat. Sand to a smooth finish.
- Designed not to sag on ceiling repairs.

Visit www.fibatape.com to view our easy to follow “How-To” videos!

FibaTape is a registered trademark and Crackstop is a trademark of Saint-Gobain ADFORS

© 2011 SAINT-GOBAIN ADFORS

www.fibatape.com

#1413 11/11

